

Photocell, fault monitoring, switch-over and flash controller unit  
Data Sheet and Installation examples

#### Key features

- Extremely reliable
- Very low power consumption
- Suitable for solar cell applications
- Integrated photocell
- Main-spare switch-over
- Flash or steady burn mode
- Alarm output

#### Benefits

- Long maintenance intervals
- Low battery costs

#### Characteristics

- User selectable photocell sensitivity
- Microprocessor controlled
- Fault monitoring based on current flow through LED lamp
- Potential free relay alarm
- Shock resistant Polycarbonate enclosure (degree of protection IP65)
- Dimensions (LxWxH): 200 mm x 200 mm x 130 mm

#### User selectable parameter switches

- Photocell on/off
- Output 1 (Main) only
- Current Alarm level
- Photocell Sensitivity
- Steady burn / Flash mode
- Indicator LEDs on/off

#### Indicator LEDs

- Over-current alarm
- Under-current alarm
- Output 1 (Main) ON
- Output 2 (Spare) ON
- Selftest OK

#### Electrical characteristics

- Operating voltage range 12...20 V<sub>DC</sub>  
With 12V<sub>DC</sub> operating voltage light
- Operating voltage range 23...28 V<sub>DC</sub>  
With 24V<sub>DC</sub> operating voltage light
- Operating voltage range 44...59 V<sub>DC</sub>  
With 48V<sub>DC</sub> operating voltage light
- Power consumption @12 V<sub>DC</sub> 0,3W
- Power consumption @24 V<sub>DC</sub> 0,7W
- Power consumption @48 V<sub>DC</sub> 1,5W
- Operating temperature range -40...+55 °C

Order code:

**CSW-DCW-0A5-F** (current alarm range 12mA-770mA)  
**CSW-DCW-02-F** (current alarm range 45mA-2250mA)  
**CSW-DCW-04-F** (current alarm range 90mA-4120mA)



#### Alarm relay characteristics

- Two pole contacts: Normally Open (NO) and Normally Closed (NC)
- Active when CSW-DCW-xx-F is powered
- Switch voltage (max): 110 V<sub>DC</sub> / 125 V<sub>AC</sub>
- Switch current (max): 1 A
- Switch power (max): 30 W
- Contact resistance 0.1 ohm

#### Flash mode

- Flash 60 FPM , Flash duration 250 ms
- Flash 40 FPM , Flash duration 250 ms
- Flash 20 FPM , Flash duration 250 ms

Option (SW: CSWB 1.06-4\_DE\_40\_60):

- Flash: 1s on, 0,5s off, 1s on, 1,5 s off \*

\*BMVBW LS 11/60.01.87-01/5 Va 02, 24. September 2002, Page 15.

#### NOTE:

Several light units can be connected in parallel, but then separate currents has to be summed up to get the correct current limit. Alarm will only be triggered outside the current limits.

This document is valid for software CSWB 1.06-4\_20\_40\_60 .



**Photocell, fault monitoring, switch-over and flash controller unit  
Data Sheet and Installation examples**
**CSW-DCW-0A5-F, CSW-DCW-02-F and CSW-DCW-04-F**
**Description of operation:**


CSW measures the current consumption of the output in use every 0,5 seconds. If five consecutive measurements give fault, the output is switched off and an alarm is generated, and the second output (if available) is taken in use. After 30 minutes CSW will try to switch the first (faulty) output back on, makes five measurements, and if it is not faulty anymore, the alarm is turned off. If it is still faulty the alarm stays on and the other output (if available) is kept on. Alarm is also generated in case of power loss.

Remember always to check that the output selection is correct: only output 1 in use or both outputs in use.


CSW DIP Switches table shows the available ranges for current alarms for defining the normal current consumption for the system depending on the number and type of LED lights used.

The same table also shows how to set the photocell into use or out of use, and how to define its sensitivity. If photocell is used, CSW-unit must be installed outdoors.


Note! If no spare unit is connected to output 2 as a backup, all LED lights of the failed output are automatically switched off when an alarm is generated.

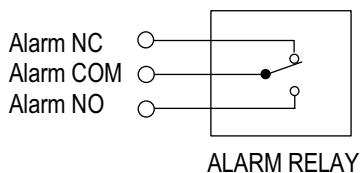**ALARM RELAY:**


Relay when power connected, no alarm.

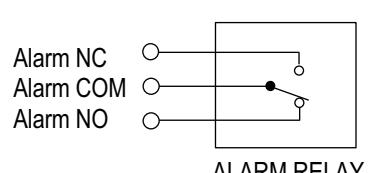

Relay when alarm on, or no power.

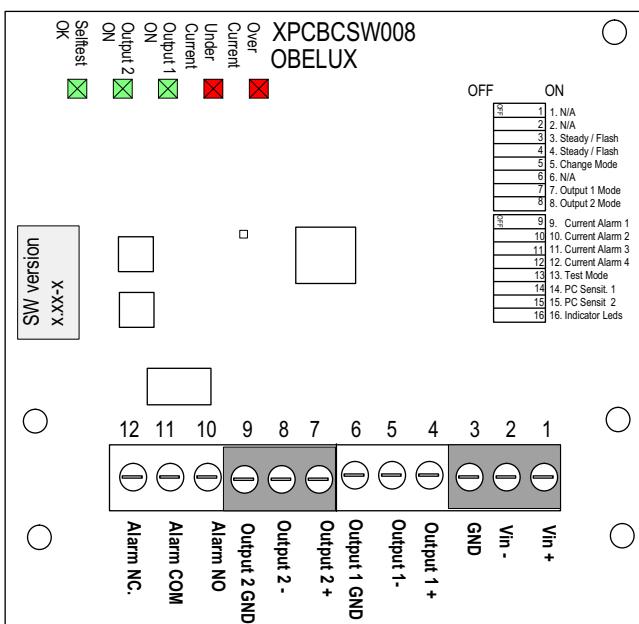


Technical information in this document is subject to change without notice. Copyright © Obelux Oy 2013

Photocell, fault monitoring, switch-over and flash controller unit  
Data Sheet and Installation examples

### Example 1

Operation voltage 12Vdc  
CSW-DCW-0A5-F

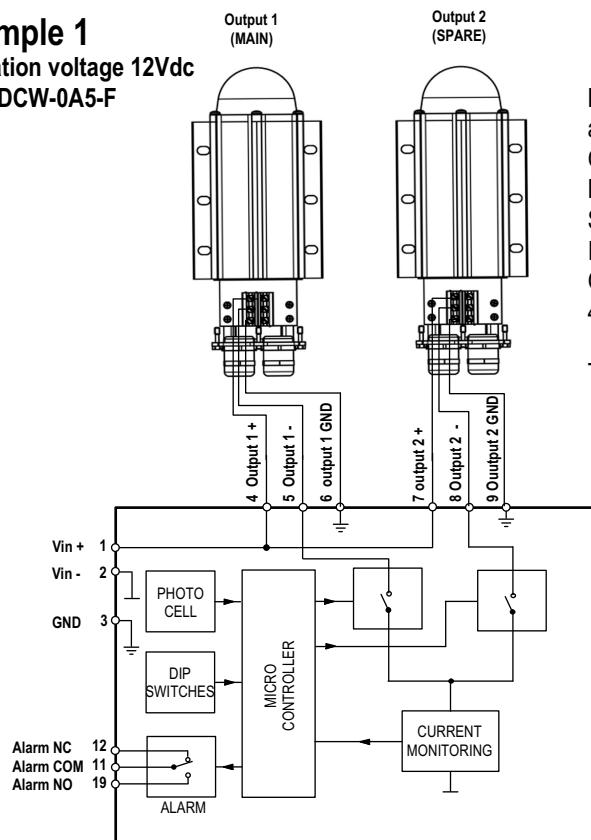

LED lights (LI-10-DCW-F) connected to both Output 1 (Main) and Output 2 (Spare).

Operation voltage 12Vdc

No Photocell control.

Steady burn.


If main fails, spare is taken into use and an alarm is generated. One light takes 70 mA, and the current alarm range is set to 48 to 112 mA.

The correct DIP switch settings are shown below.

	OFF	ON
1	■	1. N/A
2	■	2. N/A
3	■	3. Flash / Steady burn
4	■	4. Flash / Steady burn
5	■	5. Change Mode
6	■	6. N/A
7	■	7. Output 1 Mode
8	■	8. Output 2 Mode
9	■	9. Current Alarm 1
10	■	10. Current Alarm 2
11	■	11. Current Alarm 3
12	■	12. Current Alarm 4
13	■	13. Test Mode
14	■	14. PC Sensit. 1
15	■	15. PC Sensit. 2
16	■	16. Indicator Leds

### Example 2

Operation voltage 12Vdc  
CSW-DCW-0A5-F

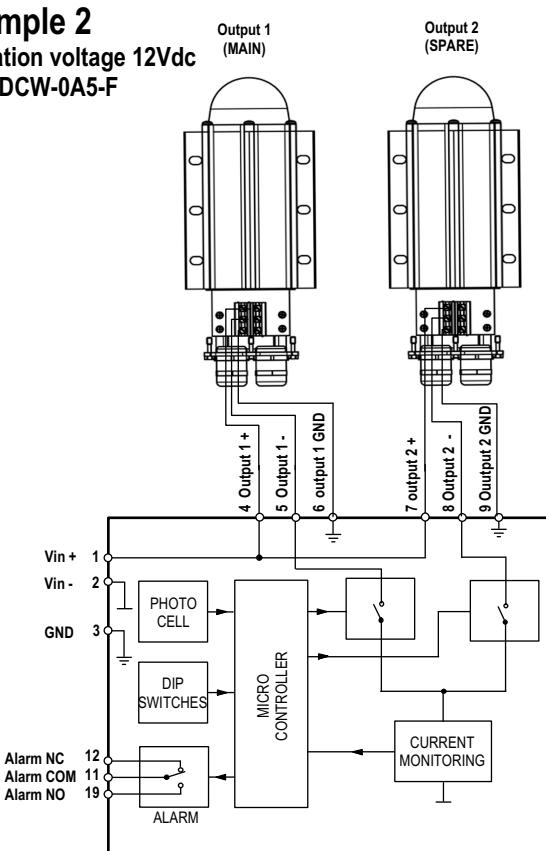

LED lights (LI-DCW-F) connected to both output 1 (Main) and output 2 (Spare).

Operation voltage 12Vdc

Photocell control, 200 lux selected.

Steady burn.

If main fails, spare is taken into use and an alarm is generated. One light takes 70 mA, and the current alarm range is set to 48 to 112 mA.

The correct DIP switch settings are shown below.


	OFF	ON
1	■	1. N/A
2	■	2. N/A
3	■	3. Flash / Steady burn
4	■	4. Flash / Steady burn
5	■	5. Change Mode
6	■	6. N/A
7	■	7. Output 1 Mode
8	■	8. Output 2 Mode
9	■	9. Current Alarm 1
10	■	10. Current Alarm 2
11	■	11. Current Alarm 3
12	■	12. Current Alarm 4
13	■	13. Test Mode
14	■	14. PC Sensit. 1
15	■	15. PC Sensit. 2
16	■	16. Indicator Leds

Technical information in this document is subject to change without notice. Copyright © Obelux Oy 2013

Photocell, fault monitoring, switch-over and flash controller unit  
Data Sheet and Installation examples

### Example 3

Operation voltage 12Vdc  
CSW-DCW-0A5-F

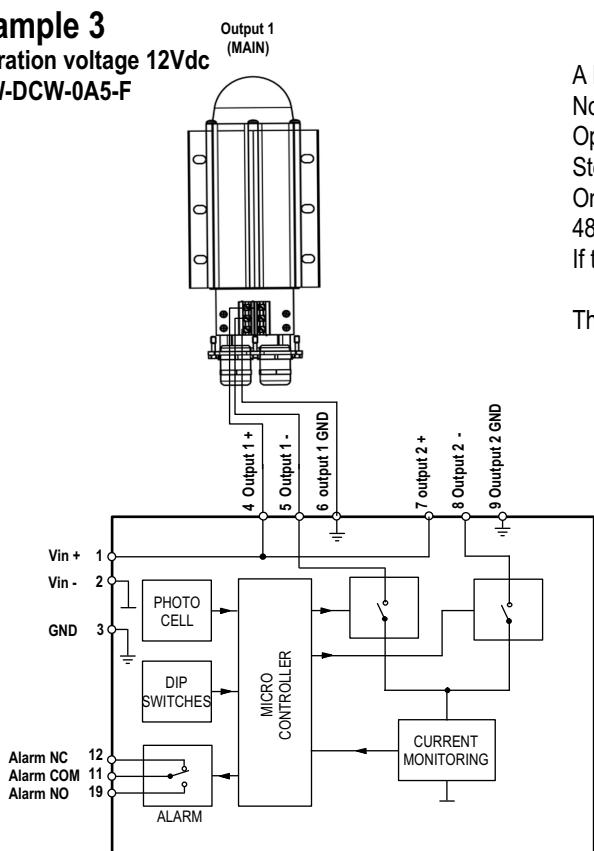

A LED light (LI-10-DCW-F) connected to Output 1 (Main).

No Photocell control

Operation voltage 12Vdc.

Steady burn.

One light takes 70 mA, and the current alarm range is set to 48 mA to 112 mA.


If the current consumption is outside this range, an alarm is generated.

The correct DIP switch settings are shown below.

	OFF	ON
1	1. N/A	
2	2. N/A	
3	3. Flash / Steady burn	
4	4. Flash / Steady burn	
5	5. Change Mode	
6	6. N/A	
7	7. Output 1 Mode	
8	8. Output 2 Mode	
9		9. Current Alarm 1
10		10. Current Alarm 2
11		11. Current Alarm 3
12		12. Current Alarm 4
13		13. Test Mode
14		14. PC Sensit. 1
15		15. PC Sensit. 2
16		16. Indicator Leds

### Example 4

Operation voltage 12Vdc  
CSW-DCW-0A5-F

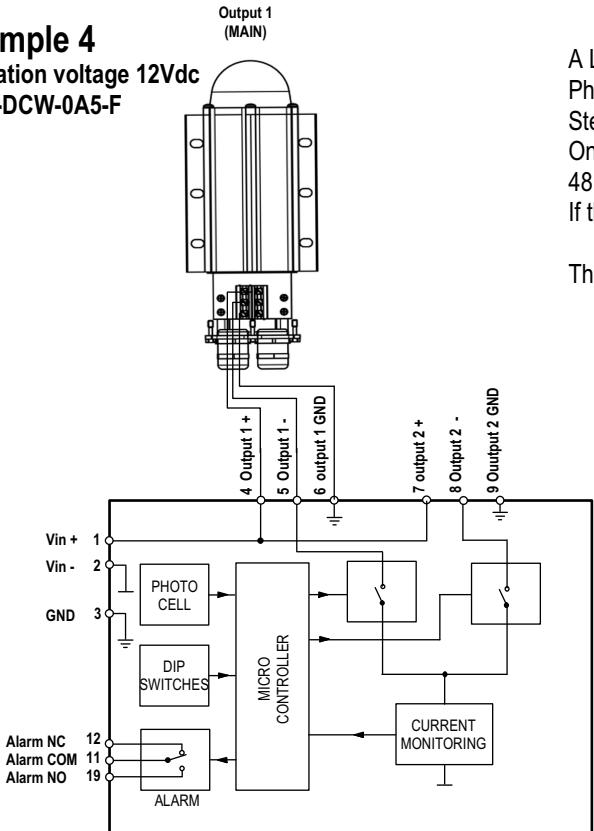

A LED light (LI-10-DCW-F) connected to Output 1 (Main).

Photocell control, 200 lux selected.

Steady burn.

One light takes 70 mA, and the current alarm range is set to 48 to 112 mA.

If the current consumption is outside this range, an alarm is generated.

The correct DIP switch settings are shown below.

	OFF	ON
1	1. N/A	
2	2. N/A	
3	3. Flash / Steady burn	
4	4. Flash / Steady burn	
5	5. Change Mode	
6	6. N/A	
7	7. Output 1 Mode	
8	8. Output2 Mode	
9		9. Current Alarm 1
10		10. Current Alarm 2
11		11. Current Alarm 3
12		12. Current Alarm 4
13		13. Test Mode
14		14. PC Sensit. 1
15		15. PC Sensit. 2
16		16. Indicator Leds

Technical information in this document is subject to change without notice. Copyright © Obelux Oy 2013

Obelux Oy

Kutomotie 6 B  
FI-00380 Helsinki  
Finland

tel: +358 50 1999

fax: +358 9 621 5518  
internet: [www.obelux.com](http://www.obelux.com)  
e-mail: [info@obelux.com](mailto:info@obelux.com)

Photocell, fault monitoring, switch-over and flash controller unit  
Data Sheet and Installation examples

Switch	CSW-DCW-0A5-F switches																						
<b>1 to 2</b>	not used																						
<b>3 to 4</b>	<b>Steady burn / Flash mode</b>																						
	3 4 on on Steady burn on off Flash 60 FPM , Flash duration 250 ms off on Flash 40 FPM , Flash duration 250 ms off off Flash 20 FPM , Flash duration 250 ms																						
<b>5</b>	<b>Change mode</b>																						
	off Must be always off																						
<b>6</b>	not used																						
<b>7</b>	<b>Photocell ON /OFF</b>																						
	on Photocell on. Day and night switch in use off Photocell off																						
<b>8</b>	<b>Output 1-2</b>																						
	on A led light connected to Output 1 (Main) only off Led lights connected to both Output 1 (Main) and Output 2 (Spare)																						
<b>9 to 12</b>	<b>Current alarm range</b>	<b>CSW-DCW-0A5-F</b>																					
	<b>9 10 11 12</b>	low limit[mA] high limit[mA]																					
	on on on on	12 28																					
	on on on off	18 42																					
	on on off on	24 56																					
	on on off off	30 70																					
	on off on on	36 84																					
	on off on off	48 112																					
	on off off on	60 140																					
	on off off off	72 168																					
	off on on on	90 210																					
	off on on off	120 280																					
	off on off on	150 350																					
	off on off off	180 420																					
	off off on on	210 490																					
	off off on off	240 560																					
	off off off on	300 700																					
	off off off off	330 770																					
<b>13</b>	<b>Photocell test mode</b>																						
	on - light switched on after 3 seconds delay and off after 3 seconds delay off - light switched on after 3 seconds delay and off after 3 minutes delay																						
<b>14 to 15</b>	<b>Photocell sensitivity</b>																						
	<b>14 15</b>	on on 100 lux on , 400 lux off on off 100 lux on , 100 lux off off on 200 lux on , 200 lux off off off 400 lux on , 400 lux off																					
<b>16</b>	<b>Indicator LEDs on/off</b>																						
	on Indicator LEDs in use off Indicator LEDs not used																						
	<b>LEDs</b>	Over Current Current too high (red LED) Under Current Current too low (red LED) OUTPUT 1 ON Output 1 (Main) used (Green LED) OUTPUT 2 ON Output 2 (Spare) used (Green LED) Self test OK Steady green, when everything is OK																					

Technical information in this document is subject to change without notice. Copyright © Obelux Oy 2013

**Photocell, fault monitoring, switch-over and flash controller unit**  
**Data Sheet and Installation examples**

Switch	CSW-DCW-02-F switches																						
<b>1 to 2</b>	not used																						
<b>3 to 4</b>	<b>Steady burn / Flash mode</b>																						
3    4	on on Steady burn on off Flash 60 FPM , Flash duration 250 ms off on Flash 40 FPM , Flash duration 250 ms off off Flash 20 FPM , Flash duration 250 ms																						
<b>5</b>	<b>Change mode</b>																						
	off Must be always off																						
<b>6</b>	not used																						
<b>7</b>	<b>Photocell ON /OFF</b>																						
	on Photocell on. Day and night switch in use off Photocell off																						
<b>8</b>	<b>Output 1-2</b>																						
	on A led light connected to Output 1 (Main) only off Led lights connected to both Output 1 (Main) and Output 2 (Spare)																						
<b>9 to 12</b>	<b>Current alarm range</b>	<b>CSW-DCW-02-F</b>																					
	<b>9    10    11    12</b>	low limit[mA]    high limit[mA]																					
	on on on on	45                135																					
	on on on off	65                195																					
	on on off on	85                255																					
	on on off off	100              300																					
	on off on on	130              390																					
	on off on off	175              525																					
	on off off on	200              600																					
	on off off off	225              675																					
	off on on on	250              750																					
	off on on off	275              825																					
	off on off on	300              900																					
	off on off off	325              975																					
	off off on on	400              1200																					
	off off on off	500              1500																					
	off off off on	650              1950																					
	off off off off	750              2250																					
<b>13</b>	<b>Photocell test mode</b>																						
	on - light switched on after 3 seconds delay and off after 3 seconds delay off - light switched on after 3 seconds delay and off after 3 minutes delay																						
<b>14 to 15</b>	<b>Photocell sensitivity</b>																						
	<b>14    15</b>	on on 100 lux on , 400 lux off on off 100 lux on , 100 lux off off on 200 lux on , 200 lux off off off 400 lux on , 400 lux off																					
<b>16</b>	<b>Indicator LEDs on/off</b>																						
	on Indicator LEDs in use off Indicator LEDs not used																						
	<b>LEDs</b>	Over Current    Current too high (red LED) Under Current    Current too low (red LED) OUTPUT 1 ON    Output 1 (Main) used (Green LED) OUTPUT 2 ON    Output 2 (Spare) used (Green LED) Self test OK    Steady green, when everything is OK																					

Technical information in this document is subject to change without notice. Copyright © Obelux Oy 2013

Photocell, fault monitoring, switch-over and flash controller unit  
Data Sheet and Installation examples


Switch	CSW-DCW-04-F switches			
<b>1 to 2</b>	not used			
<b>3 to 4</b>	<b>Steady burn / Flash mode</b>			
	<b>3 4</b> on on Steady burn on off Flash 60 FPM , Flash duration 250 ms off on Flash 40 FPM , Flash duration 250 ms off off Flash 20 FPM , Flash duration 250 ms			
<b>5</b>	<b>Change mode</b>			
	off Must be always off			
<b>6</b>	not used			
<b>7</b>	<b>Photocell ON /OFF</b>			
	on Photocell on. Day and night switch in use off Photocell off			
<b>8</b>	<b>Output 1-2</b>			
	on A led light connected to Output 1 (Main) only off Led lights connected to both Output 1 (Main) and Output 2 (Spare)			
<b>9 to 12</b>	<b>Current alarm range</b>	<b>CSW-DCW-04-F</b>		
	<b>9 10 11 12</b>	low limit[mA]	high limit[mA]	
	on on on on	90	250	
	on on on off	120	360	
	on on off on	160	460	
	on on off off	180	550	
	on off on on	230	710	
	on off on off	320	960	
	on off off on	370	1100	
	on off off off	400	1230	
	off on on on	460	1370	
	off on on off	500	1510	
	off on off on	550	1650	
	off on off off	590	1780	
	off off on on	730	2200	
	off off on off	910	2730	
	off off off on	1190	3570	
	off off off off	2250	4120	
<b>13</b>	<b>Photocell test mode</b>			
	on - light switched on after 3 seconds delay and off after 3 seconds delay off - light switched on after 3 seconds delay and off after 3 minutes delay			
<b>14 to 15</b>	<b>Photocell sensitivity</b>			
	<b>14 15</b>			
	on on 100 lux on , 400 lux off			
	on off 100 lux on , 100 lux off			
	off on 200 lux on , 200 lux off			
	off off 400 lux on , 400 lux off			
<b>16</b>	<b>Indicator LEDs on/off</b>			
	on Indicator LEDs in use			
	off Indicator LEDs not used			
	<b>LEDs</b>			
	Over Current Current too high (red LED)			
	Under Current Current too low (red LED)			
	OUTPUT 1 ON Output 1 (Main) used (Green LED)			
	OUTPUT 2 ON Output 2 (Spare) used (Green LED)			
	Self test OK Steady green, when everything is OK			

Technical information in this document is subject to change without notice. Copyright © Obelux Oy 2013

**Obelux light unit current consumptions:**

Type:	Voltage dc	Current (mA):	CSW -DCW-XX-F	CSW- XX - YY -F
10-12-F	12	200	02	12 - 16
32-12-F	12	750	02	12 - 16
30-12-CST	12	830	02	12 - 16
10-24-F	24	190	02	24 - 16
32-24-F	24	380	02	24 - 16
30-24-CST	24	420	02	24 - 16
150-24-CST	24	1600	04	24 - 16
10-48-F	48	100	02	48 - 16
32-48-F	48	190	02	48 - 16
30-48-CST	48	210	02	48 - 16
LI-10-DCW-F	12	70	0A5	12 - 02
LI-10-DCW-F	24	40	0A5	24 - 02
LI-10-DCW-F	48	23	0A5	48 - 02
LI-32-DCW-F	12	216	0A5	12 - 02
LI-32-DCW-F	24	110	0A5	24 - 02
LI-32-DCW-F	48	58	0A5	48 - 02
MI-IF-024	24	2400	04	24 - 16
MI-IF-048	48	1000	04	48 - 16

Example ordering codes for CSW:      CSW-DCW-02-F      CSW-24-16-F

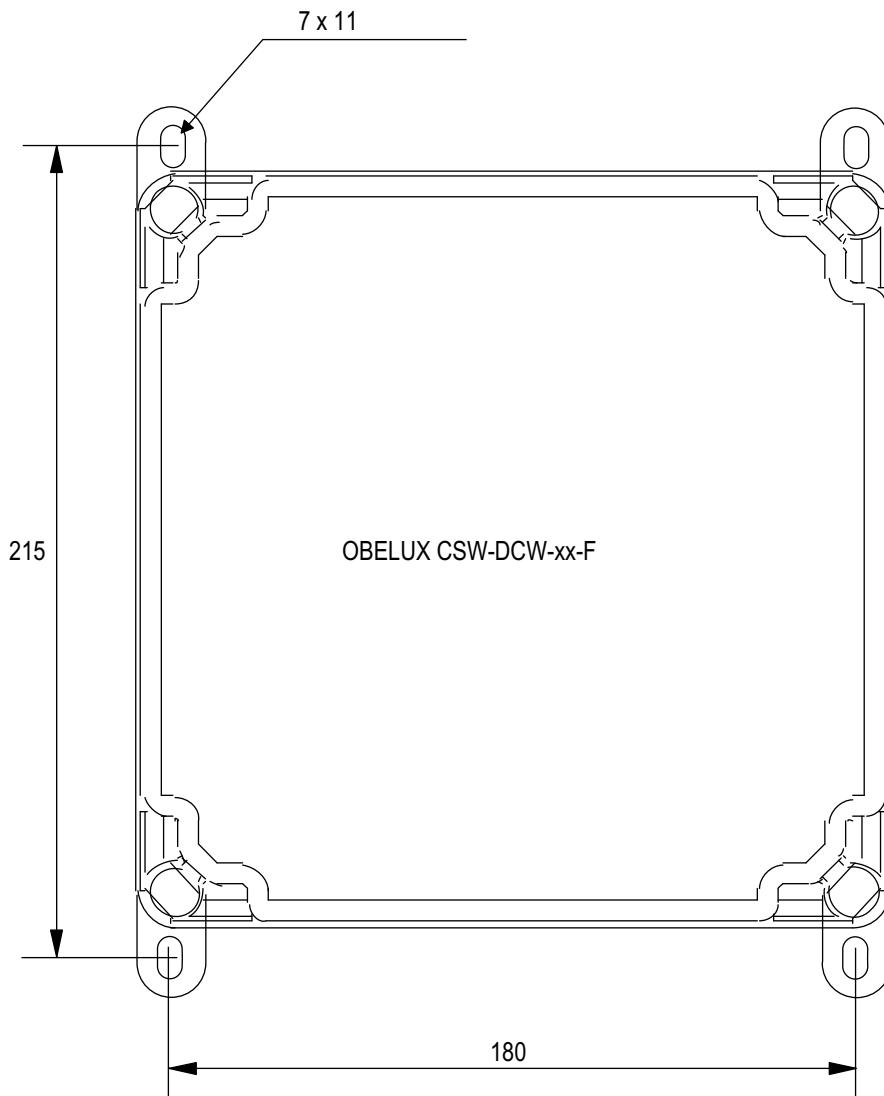

Technical information in this document is subject to change without notice. Copyright © Obelux Oy 2013